

PMA1020 Spare Parts List

Item	Part No.	Description	Q'TY
1	GM20-001	UPPER LID	1
2	GM20-002	RETAINER-BEARING	1
3	GM20-003	COVER PLUG	2
4	GM20-004	GEAR HOUSE COVER	1
5	GM20-005	CASE-TRANSMISSION	1
6	GM20-006	RETAINER-TRANSMISSION	1
7	GM20-007	CONTROL PANEL A	1
8	GM20-008	U-TYPE SEAL	1
9	GM20-009	29T GEAR	1
10	GM20-010	CLUTCH COPPER BUSHING	2
11	GM20-011	38T GEAR	1
12	GM20-012	WASHER	1
13	GM20-013	SPACER	1
14	GM20-014	MAIN SHAFT	1
15	GM20-015	DETAIN-FIXED COVER	1
16	GM20-016	GEAR	1
17	GM20-017	BEVEL GEAR	1
18	GM20-018	CLUTCH	1
19	GM20-019	SLEEVE DRIVE	1
20	GM20-020	WASHER	1
21	GM20-021	PIN	10
22	GM20-022	SPRING SHEET	10
23	GM20-024	SHAFT GEAR	1
24	GM20-025	32T GEAR	1
25	GM20-027	23T GEAR	1
26	GM20-028	OIL BAFFLE	1
27	GM20-030	WORM 4M	1
28	GM20-031	SHAFT- WORM GEAR	1
29	GM20-032	WORM GEAR	1
30	GM20-033	OIL BAFFLE	1
31	GM20-034	SPACER	1
32	GM20-036	MOTOR	1
33	GM20-037	POWER CABLE	1
34	GM20-038	35T BEVEL GEAR	1
35	GM20-039	HUB ATTACHMENT	1
36	GM20-040	HOLE PLUG	1
37	GM20-041	THUMB SCREW	1
38	GM20-042	OIL BAFFLE	1
39	GM20-044	SHIFT HANDLE KNOB	1
40	GM20-045	SHIFT HANDLE	1
41	GM20-046	ECCENTRIC SHIFT SHAFT	1
42	GM20-046	ECCENTRIC SHIFT SHAFT	1
43	GM20-047	SHIFT SELECTOR	1
44	GM20-048	ECCENTRIC SHAFT	1
45	GM20-049	LOCK SCREW	2
46	GM20-050	SHIFT FORK PLUNGER	2
47	GM20-051	SHIFTER FIXED SHAFT	1
48	GM20-052	SHIFT FORK	1
49	GM20-053	COMPRESSION SPRING	2
50	GM20-054	COMPRESSION SPRING	2
51	GM20-056	19T GEAR	1
52	GM20-057	INTERNAL GEAR	1
53	GM20-058	PLANETARY HEAD	1
54	GM20-059	AGITATING SHAFT	1
55	GM20-060	HEAD RING	1
56	GM20-061	TAPERED PIN	1
57	GM20-063	COLUMN	1
58	GM20-064	REAR COVER-HEAD	1
59	GM20-065	REAR PLATE-COLUMN	1
60	GM20-066	BASE	1
61	GM20-067	FRONT COVER-COLUMN	1
62	GM20-068	CABLE TIE	1
63	GM20-069	BOWL SUPPORT	1
64	GM20-070	BOWL PIN	2

65	GM20-071	BOWL LOCKING PLATE (LEFT)	1
66	GM20-072	BOWL LOCKING PLATE (RIGHT)	1
67	GM20-073	LIFTING BAR	1
68	GM20-074	L PLATE	1
69	GM20-075	LIFTING HANDLE BRACKET	1
70	GM20-076	LIFTING HANDLE	1
71	GM20-077	COMPRESSION SPRING	1
72	GM20-078	BOWL	1
73	GM20-079	BEATER	1
74	GM20-080	HOOK	1
75	GM20-081	WIRE WHIP	1
76	GM20-082	SEAT OF LIMIT SWITCH	1
77	GM20-083	SEAT OF SAFETY GUARD	1
78	GM20-083	SEAT OF SAFETY GUARD	1
79	GM20-084	SLIDING OPENER	1
80	GM20-084	SLIDING OPENER	1
81	GM20-085	FIXED RING	1
82	GM20-086	LIMIT SWITCH OF GUARD	1
83	GM20-087	BALL BEARING	2
84	GM20-088	BALL BEARING	1
85	GM20-089	BALL BEARING	4
86	GM20-090	BALL BEARING	1
87	GM20-091	STEEL BALL	2
88	GM20-092	O RING	1
89	GM20-093	O RING	1
90	GM20-094	O RING	1
91	GM20-095	OIL SEAL	1
92	GM20-096	OIL SEAL	1
93	GM20-097	OIL SEAL	1
94	GM20-098	C SNAP RING	1
95	GM20-099	C SNAP RING	1
96	GM20-100	C SNAP RING	1
97	GM20-101	OIL SEAL	1
98	GM20-102	SPRING PIN	2
99	GM20-103	SPRING PIN	2
100	GM20-104	TAPERED PIN	1
101	GM20-105	SPRING PIN	1
102	GM20-106	SNAP PIN	1
103	GM20-108	KEY	2
104	GM20-109	KEY	2
105	GM20-110	KEY	1
106	GM20-111	KEY	1
107	GM20-112	KEY	1
108	GM20-113	KEY	1
109	GM20-115	LONG BOLT	2
110	GM20-116	BOLT	2
111	GM20-117	BOLT	4
112	GM20-118	BOLT	6
113	GM20-119	BOLT	2
114	GM20-120	CAP SCREW	8
115	GM20-121	CAP SCREW	4
116	GM20-122	CAP SCREW	4
117	GM20-123	CAP SCREW	2
118	GM20-124	CAP SCREW	6
119	GM20-125	SCREW BAR	1
120	GM20-126	SET SCREW	1
121	GM20-127	SET SCREW	2
122	GM20-128	MAC. SCREW	4
123	GM20-129	MAC. SCREW	18
124	GM20-130	MAC. SCREW	3
125	GM20-131	MAC. SCREW	1
126	GM20-132	NUT	3
127	GM20-133	NUT	1
128	GM20-134	NUT	2
129	GM20-135	NUT	5
130	GM20-136	NUT	2

131	GM20-137	LIMIT SWITCH	1
132	GM20-139	FLAT WASHER	3
133	GM20-140	FLAT WASHER	2
134	GM20-141	SPRING WASHER	8
135	GM20-142	SPRING WASHER	4
136	GM20-143	SPRING WASHER	7
137	GM20-144	SPRING WASHER	3
138	GM20-145	SPRING WASHER	1
139	GM20-146	CAPACITOR	1
140	GM20-147	GOVERNOR PLATE	1
141	GM20-148	GOVERNOR	1
142	GM20-149	MAC. SCREW	5
143	GM20-153	GREEN BUTTON SWITCH	1
144	GM20-154	RED BUTTON SWITCH	1
145	GM20-155	TERMINAL BLOCK	1
146	GM20-156	CONTACTOR	1
147	GM20-157	SEAT OF CONTACTOR	1
148	GM20-158	MAC. SCREW	2
149	GM20-159	ON/OFF SWITCH	1
150	GM20-161	TIMER	1
151	GM20-162	SWITCH	1
152	GM20-163	CAPACITOR	1
153	GM20-164	SCREW	4