


## CONTROL PANEL

- I - GENERAL SWITCH
- T - TIMER
- V - SPEED VARIATOR
- S - START BUTTON
- E - STOP/EMERGENCY KNOB

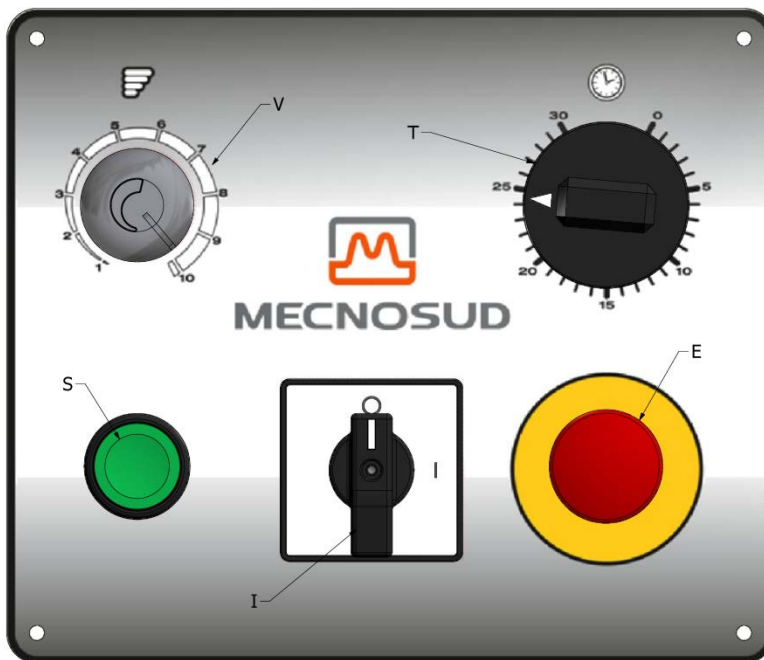

## OPERATING MODE

1. SET THE GENERAL SWITCH TO POSITION 1
2. SET THE TIMER "T" TO MANUAL OR AUTOMATIC ACCORDING TO THE OPERATING MODE DESIRED.
3. PRESS THE START BUTTON "S"
4. SET-UP THE OPERATING SPEED BY ADJUSTING THE KNOB "V"
5. IN CASE OF THE PROTECTION GRILL OPENING, THE MACHINE STOPS. TO RESTART IT, CLOSE THE GRILL AND PRESS THE START BUTTON "S" AGAIN.
6. TO STOP THE MACHINE, PRESS THE STOP/EMERGENCY KNOB "E" OR WAIT UNTIL THE END OF THE WORK CYCLE SET BY TIMER "T".